

1 inch

2

3

4

5

6

7

8

9

10

11

12

13

14

1 inch

2

3

4

5

6

7

8

9

10

Important Print settings

Transparency size: 17 × 11 inches

Page Sizing & Handling: Actual Size

Print in Grayscale: Check

Paper type: Transparency (or Glossy photo paper if transparency option is not available.)

Print this page first. Then check measurements with a ruler or tape measure, before printing your scanline overlays. This will ensure you're printing them at the right size.

Note: Transparency paper is made specifically for laser OR inkjet, not both. Make sure you're using the correct transparencies for your printer. Inkjet transparencies have a notch cut in one corner.

Arcade 1up 17in 4:3 display dimensions:
13.5625in x 10.125in